

E510/E520

Explorian™シリーズ

VM0202A

高性能ブレンダー

記号	
	警告および注意
	稼動中の部品には絶対に触れないでください。手や調理器具をコンテナの中に入れてください。
	感電の危険があります。
	高温の液体のブレンド中は、マシンは高温になります。
	使用中でない間、またはモーターベースやセンタリングパッドのお手入れや洗浄の前、あるいは可動部品に触れる前にプラグを抜いてください。
	蓋と蓋プラグを必ず所定の位置に取り付けてから操作してください。
	この取扱説明書をよく読んでご理解の上、ブレンダーをご使用ください。
	厳禁：電源コード、電源プラグ、モーターベースは、水やその他の液体に浸さないでください。
	長時間使用すると部品が熱くなります。使用後は、モーターベースソケットやドライブスブラインなど、高温になる可能性のある表面には絶対に触れないでください。
	オン/オフ
	スタート/ストップ
	パルス
プログラムシンボル (VITAMIXレシピに対応)	
	スムージー
	フローズンデザート
	温かいスープ

一部のモデルのお取り扱いをしていない地域もございます



仕様

電圧:	100 V
周波数:	50 - 60 Hz
電力 (最大) :	1000 W
高さ:	モーターベースに1.4 L (48オンス) コンテナを取り付けた場合、またはモーターベースに2.0 L (64オンス) コンテナを取り付けた場合: 44.5 cm/17.5インチ
深さ:	22.9cm/9.0インチ
幅:	20.3cm/8.0インチ
重量 (機器):	E510モデル - 4.4 kg / 9.6ポンド E520モデル - 4.5 kg / 10.0ポンド



重要な安全上の注意事項



警告 - すべての指示をお読みください



本品を初めてお使いいただく前に、すべての指示をよくお読みください。また、後から確認できるように、この指示書は保管しておいてください。

アース付きコンセントを使用してください。

アースは外さないでください。機器のプラグにアース線がある場合は、コンセントのアースに正しく接続されていることを確認してください。

アダプターを使用しないでください。

延長コードを使用しないでください。

本品をタイマーやスイッチで制御されるコンセントに差し込まないでください。



使用していないときや組み立て、分解、移動、清掃、保管を行う前には、必ず機器の電源をオフにしてプラグを抜いてください。



電源コード、電源プラグ、モーターベースを水やその他の液体に浸さないでください。

本器具が水や液体の中に落ちたり浸ったりした場合は、直ちにプラグを抜いてください。

指示に従わなかった場合、死亡または感電の原因となる可能性があります。

この製品は、ご家庭での使用のみを目的としたものであり、業務用の使用を目的としたものではありません。

- 重要な安全上の注意や安全にご使用いただくための重要な指示に従わない場合、Vitamix電化製品の誤用となり、保証が無効になったり、重大な傷害を負ったりする恐れがあります。
- 本マニュアルに記載されている説明は、発生する可能性のあるすべての状態および状況には対応できません。ブレンダーの操作と管理は、常識に基づいて、また注意を持って実施してください。
- このマニュアルに記載されているお手入れとクリーニングの指示に厳密に従ってください。
- 本器具を本来の用途以外には絶対に使用しないでください。
- 本品は、安全上の責任を負う人による使用に関する監督または指示がない場合は、身体的、感覚的または精神的能力が低下した人、または経験や知識が不足している人（お子さまを含む）はご利用いただけません。
- お子さまがブレンダーで遊ばないように監督してください。コードは、お子さまの手の届かないところに配置または保管してください。
- 本品を初めて使用する前には、梱包材、電源プラグカバー、宣伝用ラベルを外し、廃棄してください。
- コードを引っ張って本品のプラグを抜かないでください。プラグを抜くには、電源プラグを持ってコンセントから抜きます。
- 動いている部分、特にブレードには触らないでください。ブレンディングブレードアセンブリは先が尖っています。取り扱いには十分注意し、お子様の手の届かないところに保管してください。
- ブレンディングブレードが緩んだり、傷ついたり、破損している状態での使用はお止めください。使用する前にブレンディングブレードを確認し、損傷している場合は交換してください。
- 六角袋ナット（ブレードアセンブリの上部）を締めないでください。緩んでいる場合は、ブレードアセンブリをすぐに交換してください。
- 高温になるガスコンロや電気コンロの上や近く、その他の熱源に触れる可能性のある場所に本品を置かないでください。
- 本品が動作しない場合は、本品のプラグを抜き、ご家庭の電気システムのサーキットブロッカーをリセットしてください。それでもサーキットブロッカーがトリップする場合は、コンセントから本品のプラグを抜いて、資格のある電気技師にご相談ください。
- 電源コードをテーブルやカウンターの端からぶら下げた状態で置いたり、熱い表面に触れさせたり、絡まった状態で放置しないようにしてください。
- 操作する前に、必ず装置が完全に適切に組み立てられていることを確認してください。
- 本品に付属しているアタッチメント、またはVitamixが別売しているアタッチメント以外は絶対に使用しないでください。Vitamixが販売または推奨していないアタッチメント（保存用瓶など）を使用すると、火災、感電、怪我を引き起こす可能性があります。また、保証が無効になります。
- Vitamixの承認した純正部品以外の部品の使用を含む、部品の交換や改造をすると、火事、感電、またはけがの原因となる場合があります。保証は無効となります。
- モーターベースやセンタリングパッドのお手入れや洗浄の前、あるいは可動部品に触れる前に、必ず電源プラグをコンセントから抜いてください。
- 蓋とコンテナの損傷による怪我の危険を避けるため、コンテナには、「最大容量」と書かれた線を超えて食材を入れないでください。
- コンテナを使用して高温の液体や材料をブレンドする場合はご注意ください。水滴や蒸気が漏れ、やけどの原因となる可能性があります。絶対に「最大容量」と書かれた線を超える量の食材をコンテナに投入しないでください。
- 常に最も遅いスピード「1」から始めてください。やけど防止のため、手や露出した肌を蓋の開口部に近づけないでください。

重要な安全上の注意事項

22. 高温の油やその他の高温の液体が入った状態で本品やコンテナを移動する場合は、細心の注意を払う必要があります。水滴や蒸気が漏れ、やけどの原因となる可能性があります。
23. 高温になる可能性のある表面には絶対に触れないでください。
24. 操作中は本品から食材を絶対に取り出さないでください。食材を取り除く前に、モーターが完全に停止し、コンテナがモーターベースから取り外されていることを確認してください。
25. ブレンディングブレードの周りに食べ物が詰まった場合は、モーターベースからコンテナを取り外し、スパチュラを使って取り除いてください。ブレンディングブレードは鋭利であるため、絶対に指を使用しないでください。
26. 操作中は、手、髪、衣服、調理器具をすべての可動部品から遠ざけてください。これにより、大怪我をしたり、本品が破損したりするリスクを減らすことができます。スパチュラは、コンテナをモーターベースから取り外した場合にのみ使用できます。
27. 乾燥した材料、濃厚な材料、または重い材料をブレンドする際に、ブレンドがうまくいかない場合は、運転を停止し、容器をモーターベースから取り外し、ヘラを使って材料を取り除いてください。ブレンディングブレードは鋭利であるため、絶対に指を使用しないでください。モーターが冷めるまで1分間待ってから、再び本品の電源を入れます。
28. ブレンディングブレードを水に浸したままにしないでください。
29. 屋外や移動中の車やボートでは本品を絶対に使用しないでください。
30. アプライアンスの使用中は絶対に作業エリアを離れないでください。
31. スプーンやフォーク、ナイフ、蓋プラグといった異物をコンテナの中に入れたままにしないでください。アプライアンスのスイッチを入れた時に、ブレードやその他の部品が損傷するうえ、怪我につながる恐れもあります。
32. 使用中に操作音が変わったり、硬い物や異物がブレードに触れた場合は、本品で作った料理を決して提供しないでください。
33. 厳禁：コンテナの置き場所またはコンテナに入れる食材の温度が210°F (99°C) を超えないようにしてください。
34. マシンが動作している間は、必ず蓋と蓋プラグをしっかりと固定した状態で本品を操作してください。ブレードの回転中に2つのパーツからなる蓋を絶対に外さないでください。材料を追加してタンパーを使用する場合は、蓋プラグのみ外してください。
35. ブレードの回転中は、絶対に蓋を取り外さないでください。材料を追加してタンパーを使用する場合は、蓋プラグのみ外してください。
36. コンテナの下にセンタリングパッドが正しく取り付けられていない状態で、本品を使用しないでください。
37. 操作する前に、コンテナがセンタリングパッドとぴったりと合っていることを確認し、ドライブスプラインがドライブソケットとかみ合っていることを確かめます。
38. 怪我のリスクを減らすため、ブレードアセンブリはVitamixコンテナに装着されていない状態ではモーターベース上に置かないでください。
39. 動作中のモーターベースにコンテナを置いたり、コンテナをしっかりとめこまずにモーターベースを動作したりしないでください。
40. ナッツバターやオイルベースの食品を作る際は、混合物がコンテナの中でスムーズにまわり始めてから1分以上混ぜないでください。長時間混ぜすぎると、過熱を引き起こす可能性があります。
41. 電圧の急激な変化が起こった場合、本品は自動的にリセットされます。これは通常の使用をしている場合、本品が危険を回避するための正常な動作です。タイマーはユーザーの参照のみであり、本品を操作する上で絶対不可欠な機能ではありません。
42. 電源コード、電源プラグ、本体に損傷がないかを定期的にチェックしてください。何らかの損傷があった場合、または本品が故障した後は、絶対に使用せず、または直ちに使用を中止し、www.vitamix.comまでアクセスするか、Vitamixのハウスホールドテクニカルサポート（米国：1.800.848.2649、米国以外：+1.440.235.0214）まで電話またはservice@vitamix.comまでメールし、検査、修理、交換、調整を依頼してください。米国またはカナダ以外の国でお買い求めの場合は、お住まいの地域のVitamix販売代理店にお問い合わせください。
43. 修理、点検、または部品の交換は、必ずVitamixまたはVitamix指定のサービス業者にご依頼ください。
44. これらの機器は、店舗、オフィス、その他の作業環境の従業員用キッチンエリア、農家、ホテル、モーテル、その他の居住型環境の顧客、ベッド&ブレックファースト型環境など、家庭や類似の用途で使用することを目的としています。

この指示書は保管しておいてください

容器、蓋、蓋プラグ、タンパー

注記：旧シリーズのコンテナをExplorianシリーズのモーターベースで使用することもできます。

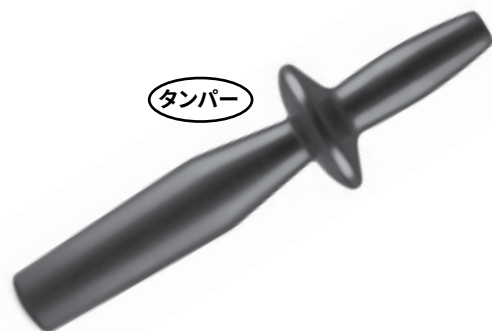
- プログラムが搭載されている場合、元々同梱されていたコンテナ用に最適化されています。
- 本品を操作するときは常に蓋をつけたままにし、タンパーを使用するときや食材を追加するときは蓋プラグのみを外してください。
- 過熱を避けるため、タンパーを30秒以上連続して使用しないでください。
- 蓋が所定の位置に固定されていることを確認せずに、本品を動かさないでください。
- 蓋プラグは計量カップとして使用できるように目盛がついています。
- 蓋プラグ開口部に蓋プラグを差し込みます。プラグを時計回りにまわして、所定の位置に固定します。取り外す場合は、プラグを反時計回りにまわして引き上げます。
- コンテナのスタイルや種類、サイズが異なる場合、蓋やタンパーを交換して使用することはできません。Vitamix1.800.848.26491.440.235.4840タンパーを使用する場合、内容物をコンテナ容量の2/3以上入れないでください。
- 必ずVitamixレシピの手順または6の食材投入順序の図に従って、コンテナに材料を投入してください。



この画像のExplorian E520では2.0 L（64オンス）コンテナが使用されています。コンテナ、タンパー、蓋はモデルによって異なる場合があります。

モーターベース

- モーターには過熱防止設計が施されています。
- 本品がすぐに動かない場合は、本品が電源に接続していること、オン/オフスイッチがオンになっていることを確認してください。
- モーターが過熱状態になった場合は、20～45分間モーターの熱を冷ましてください。





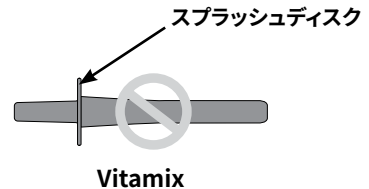
注意

回転ブレードは破損の原因となることがあります。蓋とタンパーは、スタイルや種類、サイズの違うコンテナのものを代わりに使用することはできません。本品に付属のタンパーを使用してください。

コンテナに使用するタンパーを決定する方法

ブレンダー中にタンパーを使用する前に、正しいタンパーであることを確認してください。タンパーは、蓋が所定の位置にしっかり固定され、蓋プラグが取り外された状態で必ず使用してください。ブレンダーにタンパーが付属していない場合、またはすでにお持ちのタンパーが新しいコンテナに使用できるかどうかを確認する場合は、次の手順とイラストに従い、使用するタンパーを判断してください。

1. 空のコンテナに蓋をします。
2. 蓋プラグを外し、蓋プラグの開口部からタンパーを差し込みます。適切なタンパーであれば、開口部に容易にはまりません。コンテナの中でタンパーをどの方向に動かしてもブレードに接触することはありません。
3. 目視検査: タンパーが何らかの角度でブレードに触れた場合は、容器にタンパーを使用しないでください。
4. 見て確認: お手持ちのコンテナに合ったタンパーをお持ちでない場合は、Vitamix/ハウスホールドカスタマーサービスまでお電話(1.800.848.2649または1.440.235.4840)でお問い合わせください。



タンパーの使い方

スプラッシュディスク（タンパー上部の近く）および蓋は、蓋がしっかりと適切に固定されている状態で、タンパーとブレードとの接触を防止するものです。

- ブレンド中にタンパーを使用する場合、コンテナ容量の2/3以上、内容物を入れしないでください。
- ブレンド中の過熱を避けるため、30秒以上続けてタンパーを使用しないでください。
- 食品が回転しない場合、中に気泡がたまっている可能性があります。蓋がしっかりと所定の位置にはまっていることを確認しながら、蓋プラグを慎重に外してください。蓋プラグの開口部からタンパーを差し込んで、気泡の中の空気を抜きます。
- タンパーを真っ直ぐ下に向けて持っているだけでは、内容物が回転しなくなる場合があります。必要に応じて、コンテナの側面や角に向けてタンパーを動かします。タンパーを無理にコンテナの奥へ入れようとししないでください。

コンテナの種類

1.4L/48オンス

約25cm (9.75インチ) のタンパーを使用します。



薄型 2.0 L (64オンス)

黒い蓋があり、約28cm (11インチ) のタンパーを使用します。



クラシック 2.0 L (64オンス)

約32cm (12.5インチ) のタンパーを使用します。



0.9 L (32オンス)

約25cm (9.75インチ) のタンパーを使用します。



コントロールパネル

オン/オフスイッチ Ⅱ○ – モーターベースの前面にあり、マシンの電源を制御します。

コントロールパネル – パルス、速度調節ダイヤル、スタート/ストップスイッチ 機能が搭載されています。

パルス Ⅱ – コントロールパネルの左側にあるスイッチを押すと、速度調節ダイヤルで設定した速度でブレードが回転します。

可変スピードダイヤル – 1（最も遅い）から10（最も速い）まで手動でスピードを変えることができます。

ルをスタンバイ ㊟ – 次のレシピを準備するために、本品を一時停止します。

ブレンディングプログラム – 本品をあらかじめ設定された時間だけ作動させ、プログラムが終了したら自動的に停止します。プログラムの途中でスタート/ストップスイッチ▷Ⅱ○を押すと、マシンは停止し、プログラム時間がリセットされます。プログラムの途中でダイヤルをスタンバイ㊟に回した場合、実行していたプログラムを再開することはできません。次のプログラムを選択する必要があります。ブレンダー プログラム アイコンは、Vitamix レシピに表示されます。



EXPLORIAN E520



スムージー



フローズンデザート



温かいスープ

スタート/ストップスイッチ ▷Ⅱ○ – コントロールパネルの右側にあり、いつでもブレンダーを停止または開始できます。

▷Ⅱ○を押すと、マシンは停止し、プログラム時間が実行時間の最初に戻ります。





警告



怪我を避けるため、可動部には絶対に触れないでください。



運転中は、容器に手や調理器具を近づけないでください。刃が回転している間は、刃の周りに指や調理器具を入れないでください。



ブレードは、ブレンドサイクルが終了して完全に停止するまで、回転し続けます。



蓋とコンテナの損傷による怪我の危険を避けるため、コンテナには、「最大容量」と書かれた線を超えて食材を入れないでください。

動作中のモーターベースにコンテナを置いたり、コンテナをしっかりとめこまずにモーターベースを動作したりしないでください。

やけどを防ぐため、大きな容器で熱い液体を処理する際は、絶対に可変速度1を超える速度で運転しないでください。蒸気、はねた液体、または内容物によって火傷する恐れがあります。必ず蓋と蓋プラグを閉めた状態で運転し、可変速度1で運転を開始し、ゆっくりと10まで速度を上げてください。

長時間使用すると部品が熱くなります。使用後は、モーターベースソケットやドライブスプラインなど、高温になる可能性のある表面には絶対に触れないでください。

重要！マシンが動作している間は、必ず蓋と蓋プラグをしっかり固定した状態で本品を操作してください。ブレードの回転中は、絶対に蓋を取り外さないでください。材料を追加してタンパーを使用する場合は、蓋プラグのみ外してください。作動中に蓋を外すとモーターベースが停止し、蓋と蓋プラグをコンテナの所定の場所に取り付けるまで作動しません。

4. コンテナに蓋をします。
 - 2つのタブがコンテナのふちにぴったりと収まるまで蓋を押し込みます。
 - 蓋プラグを差し込み、時計回りに回して蓋に固定します。
5. モーターベースにコンテナを設置します（コンテナに蓋を取り付けないと、本品は動作しません）。
6. 可変速度を使用するには：
 - a. 速度調節ダイヤルを回して速度を「1」に合わせます。
 - b. スタート/ストップスイッチを押します。
 - c. ブレンド中にダイヤルを「1」から「10」まで回し、ブレードの回転速度を調節します。
 - d. ブレンドの最後に速度調節ダイヤルを反時計回りに回し、スタンバイⓈに戻すか、スタート/ストップスイッチ▶|◀を押して本品を停止します。

ブレンディングプログラムを使用するには：

- a. 速度調節ダイヤルを反時計回りに回して、ご希望のプログラムを選択します。
- b. スタート/ストップスイッチを押してブレンドプログラムを開始します。ブレンディングプログラムの終了時に機器は自動的に停止します。また、いつでもスタート/ストップスイッチを押してプログラムを停止できます。
7. 混合物の回転が止まってしまった場合は、以下を行います。
 - a. 蓋プラグを取り外し、蓋プラグの開口部からタンパーを差し込み、混合物から空気が抜けるまで混ぜます。
 - b. それでも動かない場合は、オン/オフスイッチを押してモーターを止めます。
 - c. コンテナをモーターベースから取り外し、蓋を外し、ゴムベラを使ってブレードの周りから気泡を抜きます。
 - d. 必要に応じて液体を追加します。
 - e. 蓋と蓋プラグを所定の位置に取り付けます。
 - f. コンテナをモーターベースに取り付け直し、ブレンドを続けます。
8. ブレンドした後は、ブレードが完全に停止するまで待つから、蓋やコンテナをモーターベースから取り外してください。
9. Vitamixアンダーブレードスクレーパーまたはスパチュラを使用して、サルサ、ゼリー、ジャム、ピーナッツバター、その他の食材をコンテナから取り除きます。

過熱を回避するためのヒント

- 本品の使用方法を学んでいる段階では、Vitamixレシピのみを使用してください。
- レシピの推奨時間よりも長時間、食材をブレンドしないでください。ブレンドしすぎると、レシピの食感が変わってしまいます。
- レシピの推奨速度よりも低速または高速で食材をブレンドしないでください。
- 水分の少ない混合物を攪拌するにはタンパーを使用し、材料がブレードの周りをまわるようにします。

コンテナ内でのブレンディング

1. 必ず速度調節ダイヤルがスタンバイⓈの位置にあることを確認してください。
2. オン/オフスイッチ（場所については6を参照）を押して、オン (I) の位置にします。
3. Vitamixレシピの手順またはこちらのページの食材投入順序の図に従って、コンテナに材料を投入します。6



警告



怪我や破損を防止するために

誤って作動するのを防ぐため、電源をオフにして、機器のプラグを抜き、モーターベースから容器を取り外してください。



六角袋ナット（ブレードアセンブリの上部）を締めないでください。緩んでいる場合は、ブレードアセンブリをすぐに交換してください。



感電の危険があります

お手入れの前や、使用していない時は、必ずモーターベースのプラグを抜いてください。

モーターベースを水またはその他の液体に浸さないでください。

指示に従わない場合、死亡や感電の原因となる可能性があります。

初めてご使用になる前に

コンテナは、ねじやブレードアセンブリを外さずにすべてをお手入れすることが可能な設計になっています。洗浄および殺菌消毒方法、または食洗機を使用して、コンテナと部品を清潔に保つことができます。

- ・ 厳禁：リテーナーナットやブレードアセンブリを容器から取り出そうとしないでください。
 - ・ 容器が破損した場合は、使用しないでください。直ちに Vitamix ハウスホールドテクニカルサポートにご連絡ください。
1. お湯で濡らした布でモーターベースを拭き、乾いた柔らかい布でから拭きします。
 2. コンテナ、蓋、蓋プラグ、およびタンパーを、お湯と洗剤で洗います。すべての部品をよくすすぎ、乾いた柔らかい布で拭きます。
 3. 本品を水平で濡れていない清潔なカウンターに置きます。
 4. アース付きコンセントに本品のプラグを差し込みます。

モーターベースの洗浄

1. 本品の電源を切ってプラグを抜き、コンテナをモーターベースから取り外します。
2. 液体食器用中性洗剤とお湯ですすいで濡らした柔らかい布またはスポンジで外側を洗います。
注：絶対に電源コード、電源プラグ、モーターベース本体を水やその他の液体に浸さないでください。
3. センタリングパッドは取り外して洗うことができ、食洗機にも対応しています。お湯を使って洗剤で洗っていただいても結構です。
4. すぐにすべての表面を拭き、柔らかい布で磨きます。

タンパーの洗浄

タンパーは食洗機にも対応しています。お湯を使って洗剤で洗っていただいても結構です。清潔な流水ですすぎ、乾燥させてください。

コンテナの洗浄 - 食洗機

コンテナ、蓋、ブレードベース、ゴムパッキンは食洗機に対応しています。または以下の方法で手洗い・殺菌消毒が可能です。

コンテナの洗浄 - 速度調節

1. コンテナ容量の半分までお湯を入れ、食器用洗剤を数滴入れます。
2. 2つのパーツからなる蓋をしっかりと固定位置に押し込みます。
3. スタート/ストップスイッチを押して本品の電源を入れ、ゆっくりと速度を「10」まで上げます。
4. 本品を30～60秒間作動させます。
5. 速度ダイヤルを回して「1」まで戻し、スタート/ストップスイッチを押して本品の電源を切ります。
6. すべての部品をすすいで水を切ります。

コンテナの殺菌消毒 - 漂白剤

1. まず、「コンテナの洗浄」の手順にしたがって洗浄します。
2. 次に、「コンテナの洗浄」の手順を繰り返しますが、473 ml (16 オンス) の水に7.4 ml (小さじ1.5) の液体漂白剤を加えます。
3. その後1分半ほどコンテナをそのまま置いておきます。
4. 漂白剤の入ったお湯を捨てます。湿気がこもらないように、蓋を外した状態で容器を自然乾燥させてください。殺菌消毒後はすすがないでください。必要に応じて、次回使用する直前にすすいでください。

コンテナの殺菌消毒 - お酢

1. まず、「コンテナの洗浄」の手順にしたがって洗浄します。
2. 次に、「コンテナの洗浄」の手順を繰り返しますが、473 ml (16 オンス) の水に同量のお酢を加えます。
3. その後3分間コンテナをそのまま置いておきます。コンテナにお酢の溶液を入れている時間が、合計5分になるようにしてください。
4. 2つのパーツからなる蓋の内側にお酢の溶液を注ぎます。
5. 殺菌手順（ステップ2～4）をもう一度繰り返します。
6. 湿気がこもらないように、蓋を外した状態で容器を自然乾燥させてください。殺菌消毒後はすすがないでください。必要に応じて、次回使用する直前にすすいでください。

EXPLORIAN E510の保証とサービス

5*重要な制限事項：Vitamixは自社製品の保証サービスを、VitamixまたはVitamixの正規代理店がその製品を当初販売した国のみに制限する場合があります。*

- Vitamixでは、販売地または組み立て地以外の国での弊社製品の使用を推奨していません。
- 弊社製品は各国固有の安全基準に基づいて承認、認定されています。
- 製品に必要な電圧、周波、電源ケーブル、プラグは国によって異なる場合があります。

弊社正規代理店と修理技術者が在庫として保有している修理パーツは国固有のものである可能性があるため、Vitamixまたは正規代理店が当初製品を販売した国以外では、アフターサービスを利用できない場合があります。

保証内容を確認するには、https://www.vitamix.com/vr/en_us/international-supportから、お住まいの国のVitamix家庭用製品正規販売代理店/サービス業者にお問い合わせください。

本保証は、ご家庭での個人的な目的のみに本品を使用する所有者に対してVitamixが提供するものです。本保証は、商用、レンタル、または再販目的で使用される製品には適用されません。保証期間中にVitamixの所有権が移転する場合、保証開始日を確認できるように、元の領収書のコピーを新しい所有者に渡してください。

Vitamixの所有者は、本品（「本品」は同時に購入したベース、コンテナ、蓋、タンパーで構成）が素材または製造上の欠陥により、あるいはご家庭での使用による通常の摩耗により購入日または法律で認められた引渡日のいずれか早い方から5年以内に故障した場合、保証を受けることができます。Vitamix家庭用製品の正規代理店/サービス業者は、ご返送いただいた本品の受領から30日以内に、故障した本品または部品を無料で修理します。

故障した本品または部品の修理は不可能とVitamixが独自に判断した場合、Vitamix家庭用製品の正規代理店/サービス業者は本品を同じモデル（元のモデルの販売が終了している場合は最も近い次のモデル）と無料で交換します。この場合の保証開始日は交換前のVitamix製品の購入日と同じになります。

- 本保証は、商用またはご家庭用以外の用途に使用される製品には適用されません。
- 本保証は、この取扱説明書に記載されている指示、警告、および安全上の注意に従って使用・管理されていた場合にのみ有効です。本保証は事故により生じた損傷には適用されません（コンテナに異物が入った状態でブレンディングした場合、本体やコンテナを落とした場合など）。
- 本保証は、販売地または組み立て地以外の国での本品の使用が原因で生じた損傷には適用されません。保証サービスはVitamixまたは正規代理店が本品を当初販売した国に限定される場合があります。
- 本保証は、変色、キズ、研磨剤やクレンザーの使用による影響、食品の沈着といった、性能に影響のない見た目の変化は対象としていません。

コンテナ：特定のハーブやスパイスをコンテナ/カップで挽くと、コンテナやカップに傷がつき、ブレードが早く摩耗する可能性があります。砂や固い節が付いたままのハーブもブレードが早く摩耗する原因となります。ハーブには揮発性の油分が含まれていることがあり、コンテナやカップに油分が残り、変色の原因となる場合があります。このような場合、コンテナやカップおよびブレードはVitamixの保証外となります。

Vitamixは、承認した保証対象以外の修理の費用に対するいかなる責任も負いません。お使いのVitamixのサービス・修理に対応できるのは、Vitamix Householdの正規代理店/サービス業者のみです。

修理、交換、購入額の返金は本保証に基づく購入者の唯一の救済措置であり、Vitamixおよび正規代理店の唯一の責任です。Vitamixまたは正規代理店の従業員または代理人は、Vitamixに対して拘束力を持つ追加の保証または本保証の変更を行う権限を有しません。したがって購入者は、Vitamixまたは正規代理店の従業員または代理人が行ったいかなる追加の発言も信頼しないでください。いかなる場合も、契約、損害賠償、保証、不法行為（過失を含む）、厳格責任に基づく場合であろうとなかろうと、Vitamixは、利益または収益の制限の無い損失を含む、特別な、間接的、偶発的または必然的な損害について、責任を負うものではありません。

注：Vitamixの修理が必要で、保証ガイドラインに該当しない場合は、費用（修理費と送料）をご自身で負担していただければ、修理することが可能です。https://www.vitamix.com/vr/en_us/international-supportから、お住まいの国のVitamix家庭用製品正規販売店/サービス業者にお問い合わせください。Vitamix家庭用製品のサポートまたは販売については、800.848.2649（米国）または+1.440.235.4840（米国以外）からお電話で、service@vitamix.comからメールでご連絡ください。

- 本品の濫用、誤用、不注意な使用、改造、異常または極端な環境への露出が行われた場合や、本取扱説明書の操作説明指示に従わなかった場合、本保証は無効となります。
- 本保証は次の場合にも無効となります。VitamixまたはVitamix指定のサービス業者以外が本品または部品の修理を行った場合。本保証の対象である本品の部品を、Vitamixが明示的に承認していないモーターベースまたはコンテナと組み合わせて使用した場合。
- 電圧を変換する変圧器やアダプターとブレンダーが併用される場合、本保証は無効になります。
- シリアル番号情報を含むデータ ラベルを取り外すと、保証が無効になります。

Vitamixのメンテナンスについては、お住まいの国のVitamix正規代理店／サービス業者にお問い合わせください。Vitamix正規代理店リストはこちらをご覧ください：https://www.vitamix.com/vr/en_us/international-support。

EXPLORIAN E520の保証とサービス

7*重要な制限事項：Vitamixは自社製品の保証サービスを、VitamixまたはVitamixの正規代理店がその製品を当初販売した国のみに制限する場合があります。^{*}

- Vitamixでは、販売地または組み立て地以外の国での弊社製品の使用を推奨していません。
- 弊社製品は各国固有の安全基準に基づいて承認、認定されています。
- 製品に必要な電圧、周波、電源ケーブル、プラグは国によって異なる場合があります。

弊社正規代理店と修理技術者が在庫として保有している修理パーツは国固有のものである可能性があるため、Vitamixまたは正規代理店が当初製品を販売した国以外では、アフターサービスを利用できない場合があります。

保証内容を確認するには、https://www.vitamix.com/vr/en_us/international-supportから、お住まいの国のVitamix家庭用製品正規販売代理店/サービス業者にお問い合わせください。

本保証は、ご家庭での個人的な目的のみに本品を使用する所有者に対してVitamixが提供するものです。本保証は、商用、レンタル、または再販目的で使用される製品には適用されません。保証期間中にVitamixの所有権が移転する場合、保証開始日を確認できるように、元の領収書のコピーを新しい所有者に渡してください。

Vitamixの所有者は、本品（「本品」は同時に購入したベース、コンテナ、蓋、タンパーで構成）が素材または製造上の欠陥により、あるいはご家庭での使用による通常の摩耗により購入日または法律で認められた引渡日のいずれか早い方から7年以内に故障した場合、保証を受けることができます。Vitamix家庭用製品の正規代理店/サービス業者は、ご返送いただいた本品の受領から30日以内に、故障した本品または部品を無料で修理します。

故障した本品または部品の修理は不可能とVitamixが独自に判断した場合、Vitamix家庭用製品の正規代理店/サービス業者は本品を同じモデル（元のモデルの販売が終了している場合は最も近い次のモデル）と無料で交換します。この場合の保証開始日は交換前のVitamix製品の購入日と同じになります。

- 本保証は、商用またはご家庭用以外の用途に使用される製品には適用されません。
- 本保証は、この取扱説明書に記載されている指示、警告、および安全上の注意に従って使用・管理されていた場合にのみ有効です。本保証は事故により生じた損傷には適用されません（コンテナに異物が入った状態でブレンディングした場合、本体やコンテナを落とした場合など）。
- 本保証は、販売地または組み立て地以外の国での本品の使用が原因で生じた損傷には適用されません。保証サービスはVitamixまたは正規代理店が本品を当初販売した国に限定される場合があります。
- 本保証は、変色、キズ、研磨剤やクレンザーの使用による影響、食品の沈着といった、性能に影響のない見た目の変化は対象としていません。

コンテナ：特定のハーブやスパイスをコンテナ/カップで挽くと、コンテナやカップに傷がつき、ブレードが早く摩耗する可能性があります。砂や固い節が付いたままのハーブもブレードが早く摩耗する原因となります。ハーブには揮発性の油分が含まれていることがあり、コンテナやカップに油分が残リ、変色の原因となる場合があります。このような場合、コンテナやカップおよびブレード Vitamixの保証外となります。

Vitamixは、承認した保証対象以外の修理の費用に対するいかなる責任も負いません。お使いのVitamixのサービス・修理に対応できるのは、Vitamix Householdの正規代理店/サービス業者のみです。

修理、交換、購入額の返金は本保証に基づく購入者の唯一の救済措置であり、Vitamixおよび正規代理店の唯一の責任です。Vitamixまたは正規代理店の従業員または代理人は、Vitamixに対して拘束力を持つ追加の保証または本保証の変更を行う権限を有しません。したがって購入者は、Vitamixまたは正規代理店の従業員または代理人が行ったいかなる追加の発言も信頼しないでください。いかなる場合も、契約、損害賠償、保証、不法行為（過失を含む）、厳格責任に基づく場合であろうとなかろうと、Vitamixは、利益または収益の制限の無い損失を含む、特別な、間接的、偶発的または必然的な損害について、責任を負うものではありません。

Vitamixの修理が必要で、保証ガイドラインに該当しない場合は、費用（修理費と送料）をご自身で負担していただければ、修理することが可能です。https://www.vitamix.com/vr/en_us/international-supportから、お住まいの国のVitamix家庭用製品正規販売店/サービス業者にお問い合わせください。Vitamix家庭用製品のサポートまたは販売については、800.848.2649（米国）または+1.440.235.4840（米国以外）からお電話で、service@vitamix.comからメールでご連絡ください。

- 本品の濫用、誤用、不注意な使用、改造、異常または極端な環境への露出が行われた場合や、本取扱説明書の操作説明指示に従わなかった場合、本保証は無効となります。
- 本保証は次の場合にも無効となります。VitamixまたはVitamix指定のサービス業者以外が本品または部品の修理を行った場合。本保証の対象である本品の部品を、Vitamixが明示的に承認していないモーターベースまたはコンテナと組み合わせ使用した場合。
- 電圧を変換する変圧器やアダプターとブレンダーが併用される場合、本保証は無効になります。
- シリアル番号情報を含むデータ ラベルを取り外すと、保証が無効になります。
















Vitamixのメンテナンスについては、お住まいの国のVitamix正規代理店/サービス業者にお問い合わせください。Vitamix正規代理店リストはこちらをご覧ください：https://www.vitamix.com/vr/en_us/international-support。

E510/E520

EXPLORIAN™ SERIES

VM0202A

HIGH-PERFORMANCE BLENDER

SYMBOLS	
	Warning and Caution
	NEVER touch moving parts. Keep hands and utensils out of the container.
	Electric Shock Hazard
	High temperatures exist when blending hot liquids.
	Unplug while not in use, before cleaning the motor base or centering pad, or touching parts that move.
	ALWAYS operate with the lid and lid plug in place.
	Read and understand the owner's manual.
	NEVER immerse the power cord, power plug, or motor base in water or any other liquid.
	Parts will become hot with extended use. NEVER touch surfaces that may be hot, including the motor base socket or the drive spline after use.
	On / Off
	Start / Stop
	Pulse
PROGRAM SYMBOLS (CORRESPOND TO VITAMIX RECIPES)	
	Smoothies
	Frozen Desserts
	Hot Soup

Some models are not available in all countries



SPECIFICATIONS

Voltage:	100 V
Frequency:	50 - 60 Hz
Power (max):	1000 Watts
Height:	with 1.4 L / 48 oz. container on motor base OR with 2.0 L / 64 oz. container on motor base: 44.5 cm / 17.5 inches
Depth:	22.9 cm / 9.0 inches
Width:	20.3 cm / 8.0 inches
Weight (appliance):	E510 Model - 4,4 kg / 9.6 lbs E520 Model - 4,5 kg / 10.0 lbs



IMPORTANT SAFEGUARDS

WARNING - READ ALL INSTRUCTIONS



Carefully read all instructions before operating the appliance for the first time. Save these instructions for future reference.

ALWAYS use grounded outlets.

NEVER remove the ground. If the appliance plug has a ground wire, ensure it is properly connected to the outlet ground.

NEVER use an adapter.

NEVER use an extension cord.

NEVER plug the appliance into a timer or an outlet controlled by a switch.



ALWAYS turn off AND unplug the appliance when not in use and before assembling, disassembling, moving, cleaning, and storing.

NEVER immerse the power cord, power plug, or motor base in water or any other liquid.

If the appliance becomes submerged, unplug immediately.

Failure to follow instructions can cause death or electrical shock.

This product is intended for HOUSEHOLD USE ONLY and is not intended to be used for commercial purposes.

1. THE FAILURE TO FOLLOW ANY OF THE IMPORTANT SAFEGUARDS AND IMPORTANT INSTRUCTIONS FOR SAFE USE IS A MISUSE OF YOUR VITAMIX APPLIANCE THAT CAN VOID YOUR WARRANTY AND CREATE THE RISK OF SERIOUS INJURY.
2. The instructions appearing in this manual cannot cover every possible condition and situation that may occur. Common sense and caution must be practiced when operating and maintaining any appliance.
3. Strictly follow the care and cleaning instructions provided in this manual.
4. NEVER use the appliance for anything other than its intended use.
5. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
6. Children should be supervised to ensure that they do not play with the appliance. Keep the cord out of reach from children.
7. Remove and discard packaging materials, the power plug cover, and promotional labels before using the appliance for the first time.
8. NEVER unplug the appliance by pulling on the cord. To unplug the appliance, grasp the power plug and pull from the outlet.
9. NEVER come in contact with moving parts, especially the blending blades. The blending blade assembly is very sharp. Handle carefully and keep out of reach of children.
10. NEVER operate the appliance with loose, nicked, or damaged blending blades. Check the blending blades prior to each use and replace if damaged.
11. NEVER tighten the acorn nut (on the top of the blade assembly). If loose, replace the blade assembly immediately.
12. NEVER place the appliance on or near a hot gas or electric burner, or where it could touch any other source of heat.
13. If the appliance will not operate, unplug the appliance and reset the household electrical system circuit protector. If the circuit protector continues to trip, unplug the appliance from the outlet and contact a qualified electrician.
14. NEVER allow the power cord to hang over the edge of a table or counter, touch hot surfaces, or become knotted.
15. ALWAYS ensure the appliance is completely and properly assembled before operation.
16. NEVER use attachments other than those provided with the appliance or offered separately from Vitamix. The use of attachments, including preserving jars, not sold or recommended by Vitamix may cause fire, electric shock, or injury and will void the warranty.
17. Alteration or modification of any part of the appliance, including the use of any part or parts that are not genuine authorized Vitamix parts, may cause fire, electric shock, or injury and will void your warranty.
18. ALWAYS ensure the appliance is unplugged from the power outlet before cleaning the motor base or centering pad, or touching parts that move.
19. NEVER fill the container above the marked "MAXIMUM CAPACITY" line to avoid risk of injury caused by damage to the lid and container.
20. When blending hot liquids or ingredients in the container, use caution; spray or escaping steam may cause burns. NEVER fill the container above the marked "MAXIMUM CAPACITY" line.
21. ALWAYS begin processing on the lowest speed setting, Variable Speed 1. Keep hands and other exposed skin away from the lid opening to prevent possible burns.
22. Extreme caution must be used when moving an appliance or container filled with hot oil or other hot liquids; spray or escaping steam may cause burns.
23. NEVER touch surfaces that may be hot.

IMPORTANT SAFEGUARDS

24. NEVER remove ingredients from the appliance during operation. Ensure the motor has completely stopped and the container removed from the motor base before removing any ingredients.
25. If food becomes lodged around the blending blade, remove the container from the motor base, and use a spatula to dislodge the food. NEVER use fingers as the blending blade is sharp.
26. Keep hands, hair, clothing, and utensils away from all moving parts during operation to reduce the risk of severe injury to persons and/or damage to the appliance. A spatula may be used, but only when the container has been removed from the motor base.
27. If the blend is not processing when blending dry, thick, or heavy mixtures, stop operation, remove the container from the motor base, and use a spatula to dislodge the food. NEVER use fingers as the blending blade is sharp. Allow the motor to cool for 1 minute before turning the appliance back on.
28. NEVER allow the blending blade to soak in water.
29. NEVER use outdoors or on moving vehicles or boats.
30. NEVER leave the working area when the appliance is in use.
31. NEVER leave any foreign object, such as spoons, forks, knives, or the lid plug in the container as this will damage the blades and other components when starting the appliance and may cause injury.
32. If during use, the sound of the appliance changes or if a hard or foreign object comes into contact with the blades, NEVER serve the food being made with the appliance.
33. NEVER expose the container to temperatures or ingredients over 210°F (99°C).
34. ALWAYS operate the appliance with the lid and lid plug firmly in place when the machine is in operation. NEVER remove the 2-part lid while the blades are rotating. Only remove the lid plug to add ingredients and to use the tamper.
35. NEVER remove the lid while blades are rotating. Only remove the lid plug to add ingredients and to use the tamper.
36. NEVER operate the appliance without the centering pad installed properly underneath the container.
37. Ensure the container is flush with the centering pad to ensure the drive spline is engaged with the drive socket before operating.
38. NEVER place a blade assembly on the motor base unless assembled to the Vitamix container to reduce the risk of injury.
39. NEVER attempt to place a container on an operating motor base or operate a motor base without a container properly in place.
40. When making nut butters or oil-based foods, do not process for more than one minute after the mixture starts to circulate in the container. Processing for longer periods can cause overheating.
41. The appliance will reset itself in the event of power line surge. This is a design feature to avoid hazards, if used as intended. The timer is only for the user's reference and is not considered an essential function of the appliance's operation.
42. Regularly inspect the power cord, power plug, and the appliance for any damage. NEVER operate if damaged in any way or after the appliance malfunctions. Immediately cease use of the appliance and visit www.vitamix.com or call Vitamix Household Technical Support at 1.800.848.2649 or 1.440.235.4840 or email service@vitamix.com at once for examination, repair, replacement, or adjustment. If purchased outside the U.S.A. or Canada, contact your local Vitamix dealer.
43. Any repair, servicing, or replacement of parts must be performed by Vitamix or a Vitamix authorized service representative.
44. These appliances are intended to be used in household and similar applications such as staff kitchen areas in shops, offices and other working environments, farm houses, by clients in hotels, motels and other residential type environments, and bed and breakfast type environments.

SAVE THESE INSTRUCTIONS

PARTS AND FEATURES

Container, Lid, Lid Plug, and Tamper

NOTE: Legacy containers can be used on the Explorian Series motor base.

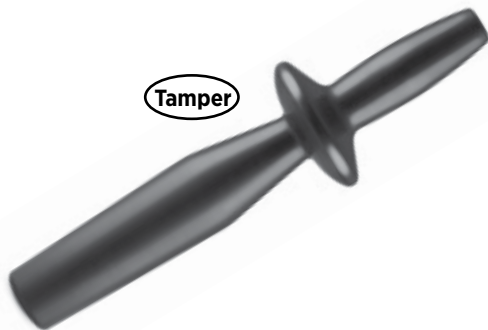
- Programs, if included, are optimized specifically for the container that was part of the original purchase.
- ALWAYS leave the lid on when operating the appliance and remove ONLY the lid plug to use the tamper or to add ingredients.
- NEVER use the tamper for more than 30 consecutive seconds to avoid overheating.
- NEVER operate the appliance without ensuring the lid is securely locked in place.
- The lid plug is marked so it can be used as a measuring cup.
- Insert the lid plug through the lid plug opening. Lock the plug in place by rotating it clockwise. To remove, turn the plug counter-clockwise and lift it out.
- Lids and tampers are NOT interchangeable between different container styles, types, and sizes. **Use only the tamper and lid supplied with your appliance. If you do not have the correct tamper for your container, contact Vitamix Household Technical Support at 1.800.848.2649 (International: 1.440.235.4840).**
- The container should not be more than 2/3 full when the tamper is used.
- ALWAYS load the container according to the Vitamix recipe directions or the Ingredient Load Order illustration on page 16.



Explorian E520 shown with 2.0 L / 64 oz. container.
The container, tamper, and lid may be different depending on your model.

Motor Base

- The motor is designed to protect itself from overheating.
- If the appliance will not start immediately, check to ensure the appliance is plugged in and the On/Off Switch is ON.
- If the motor has overheated, allow the motor to cool for 20-45 minutes.



TAMPERS



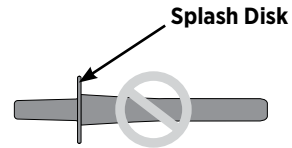
CAUTION

Rotating Blades Can Cause Damage. Lids and tampers are NOT interchangeable between different container styles, types, and sizes. Use the tamper that was supplied with your appliance.

How to Determine the Tamper to be Used with Your Container

Before using a tamper during blending, verify you have the correct tamper. Only use the tamper with the lid securely locked in place and the lid plug removed. **If a tamper came with your appliance at purchase, it is the correct tamper to use.** If a tamper did not come with your appliance or you want to determine if a tamper you already have can be used with your new container, use these steps and illustrations to determine what tamper to use:

1. Place the lid on an empty container.
2. Remove the lid plug and insert the tamper through the lid plug opening. The tamper should fit easily into the opening. It should NOT come into contact with the blades no matter where you move the tamper inside the container.
3. Visually inspect: **IF THE TAMPER TOUCHES THE BLADES AT ANY ANGLE, NEVER USE THE TAMPER WITH YOUR CONTAINER.**
4. If you do not have the correct tamper for your container, contact Vitamix Household Customer Service at 1.800.848.2649 or 1.440.235.4840.



A non-step tamper MUST NOT be used with any Vitamix container.

HOW TO USE THE TAMPER:

IMPORTANT! The splash disk (near the top of the tamper) and lid prevent the tamper from hitting the blades when the lid is secured properly in the locked position.

- The container should not be more than two-thirds full when the tamper is used during blending.
- To avoid overheating during blending, DO NOT use the tamper for more than 30 consecutive seconds.
- If the food does not circulate, there may be a trapped air bubble. Carefully remove the lid plug, while making sure the lid stays firmly in place. Release the air bubble by inserting the tamper through the lid plug opening.
- Holding the tamper straight down may not help the ingredients circulate. If necessary, point the tamper towards the sides or corners of the container. DO NOT try to force the tamper deeper into the container.

CONTAINER TYPES

1.4 L / 48-OUNCE

Uses a 9-3/4" tamper.



LOW-PROFILE 2.0 L / 64-OUNCE

Has a black lid and
uses an 11" tamper.



CLASSIC 2.0 L / 64-OUNCE

Uses a 12 1/2" long tamper.




0.9 L / 32-OUNCE


Uses a 9-3/4" tamper.




CONTROL PANEL

On/Off Switch  – Controls power to the machine and is located on the front of the motor base.


Control Panel – Contains the Pulse, Variable Speed Dial, and Start/Stop Switch features.


Pulse  – Rotates the blade at the speed on the Variable Speed Dial when pressed and is located on the left side of the control panel.

Variable Speed Dial – Provides manual speed control from Variable 1 (slowest) to 10 (highest).

Standby  – Pauses the appliance and has it ready to start the next recipe.

Blending Programs – Operates the appliance for pre-set times and will stop automatically at the end of the program.

When the Start/Stop Switch  is pressed in the middle of a program, the machine will stop and the program time will reset.

If the dial is turned to Standby  in the middle of a program, it will not go back to the middle of a program it was running. The next desired program will need to be selected.

The Blending Program icons are displayed in Vitamix recipes.




Smoothies




Frozen Desserts



Hot Soup

Start/Stop Switch  – Stops or Starts the blending at any time and is located on the right side of the control panel.

When the Start/Stop Switch  is pressed in the middle of a program, the machine will stop and the program time will reset to the beginning of the run time.



EXPLORIAN E520



WARNING



To Avoid Injury. NEVER TOUCH MOVING PARTS.



Keep hands and utensils out of the container during appliance operation. NEVER insert fingers or utensils around the blades while the blades are spinning.



The blades will continue to spin until they come to a complete stop at the end of the blend cycle.



NEVER fill the container above the marked "MAXIMUM CAPACITY" line to avoid risk of injury caused by damage to the lid and container.

NEVER attempt to place a container on an operating motor base or operate a motor base without a container properly in place.

To avoid possible burns, NEVER start on speeds above Variable Speed 1 when processing hot liquids in a large container. Escaping steam, splashes, or contents may burn. ALWAYS operate with the lid and lid plug in place and start on Variable Speed 1, then slowly increase to 10.

Parts will become hot with extended use. NEVER touch surfaces that may be hot, including the motor base socket or the drive spline after use.

TIPS TO PREVENT OVERHEATING

- Process only Vitamix recipes when learning to use the appliance.
- NEVER process recipes for longer than recommended. Over-processed blends can also result in the incorrect recipe texture.
- NEVER process recipes at lower or higher speeds than recommended.
- Use the tamper to process thicker mixtures and keep ingredients moving around and through the blades.

BLENDING IN THE CONTAINER

1. ALWAYS ensure the Variable Speed Dial is in Standby ☹ position.
2. Press the On/Off Switch (see page 16 for location) to the ON (I) position.
3. Load the container according to the Vitamix recipe directions or the Ingredient Load Order illustration (see page 16).

IMPORTANT! ALWAYS operate the appliance with the lid and lid plug firmly in place when the machine is in operation. NEVER remove the lid while blades are rotating. Only remove the lid plug to add ingredients and to use the tamper. If the lid is removed during operation, the motor base will stop and will not run until the lid and lid plug are in place on the container.

4. Place the lid onto the container:
 - Push down on the lid until the two tabs snap onto the lip of the container.
 - Insert the lid plug and turn clockwise to lock it into the lid.
5. Place the container onto the motor base. (The appliance will not operate without a container with the lid attached.)
6. **TO USE VARIABLE SPEED:**
 - a. Turn the Variable Speed Dial clockwise to Variable Speed 1.
 - b. Press the Start/Stop Switch.
 - c. Rotate the Dial between Variable Speed 1 and 10 during the blending cycle to increase or decrease the speed of the blades.
 - d. At the end of the blend, rotate the Variable Speed Dial counter-clockwise to Standby ☹ or press the Start/Stop Switch ▷|◻ to stop the appliance.

TO USE BLENDING PROGRAMS:

- a. Turn the Variable Speed Dial counter-clockwise to the desired program.
 - b. Press the Start/Stop Switch to start the blending program. The appliance will stop automatically at the end of the blending program or press the Start/Stop Switch at any time to stop the program.
7. If the mixture stops circulating:
 - a. Remove the lid plug, insert the tamper through the lid plug opening, and stir until the mixture 'burps'.
 - b. If this does not work, press the On/Off Switch to stop the motor.
 - c. Remove the container from the motor base, remove the lid, and use a rubber spatula to press the air bubble away from the blades.
 - d. Add liquid if necessary.
 - e. Replace the lid and lid plug.
 - f. Return the container to the motor base and continue blending.
 8. After blending, wait until the blades stop completely before removing the lid or removing the container from the motor base.
 9. Use a Vitamix Under Blade Scraper or spatula to remove salsa, jelly, jam, peanut butter, and other ingredients from the container.

WARNING



To Avoid Injury and Damage

Turn off, unplug the appliance, and remove the container from the motor base to avoid inadvertent activation.



NEVER tighten the acorn nut (on the top of the blade assembly). If loose, replace the blade assembly immediately.



Electrical Shock Hazard

ALWAYS unplug the motor base before cleaning or when not in use.

NEVER put the motor base in water or other liquid. Failure to follow instructions can cause death or electrical shock.

BEFORE FIRST USE

The container is designed to be completely cleanable without removing the retainer nut and blade assembly. The cleaning and sanitizing procedures or a dishwasher cleaning cycle will ensure a complete and thorough cleaning of the container and components.

- NEVER attempt to remove the retainer nut or blade assembly from the container.
 - If the container is damaged, DO NOT USE IT. Contact Vitamix Household Technical Support IMMEDIATELY for assistance.
1. Wipe the motor base with a warm damp cloth and wipe clean with a dry, soft cloth.
 2. Wash the container, lid, lid plug, and tamper with warm, soapy water. Rinse all parts and wipe dry with a dry, soft cloth.
 3. Place the appliance on the counter that is level, dry and clean.
 4. Plug the appliance into a grounded, 3-prong outlet.

MOTOR BASE CLEANING

1. Turn off and unplug the appliance and remove the container from the motor base.
2. Wash the outside surface with a damp, soft cloth or sponge rinsed in a mild solution of liquid dish soap and warm water.
NOTE: NEVER immerse the power cord, power plug, or motor base in water or any other liquid.
3. The centering pad can be removed for more thorough cleaning and is dishwasher safe or can be hand-washed in warm, soapy water.
4. Immediately dry all surfaces and polish with a soft cloth.

TAMPER CLEANING

The tamper is dishwasher safe or can be hand-washed in warm, soapy water. Rinse clean under running water and then dry.

CONTAINER CLEANING - DISHWASHER

The container, lid, blade base, and seal are dishwasher safe or can be hand-washed and sanitized using the following procedures.

CONTAINER CLEANING - VARIABLE SPEED

1. Fill the container half full with warm water and add a couple of drops of dish soap.
2. Snap or push the complete 2-part lid into the locked position.
3. Press the Start/Stop Switch to turn on the appliance and slowly increase to Variable Speed 10.
4. Run the appliance for 30 to 60 seconds.
5. Rotate the Variable Speed Dial back to Variable Speed 1 and press the Start/Stop Switch to turn off the appliance.
6. Rinse and drain all pieces.

CONTAINER SANITIZING - BLEACH

1. First perform the "Container Cleaning" instructions.
2. Then repeat the "Container Cleaning" instructions but add 7.4 ml (1½ teaspoons) of liquid bleach to 473 ml (16 oz.) of water.
3. Allow the mixture to stand in the container for an additional 1½ minutes.
4. Pour the bleach mixture out. Allow the container to air dry with the lid off to avoid trapping moisture. DO NOT rinse after sanitizing. If desired, rinse immediately before the next use.

CONTAINER SANITIZING - VINEGAR

1. First perform the "Container Cleaning" instructions.
2. Then repeat the "Container Cleaning" instructions but use 473 ml (16 oz.) of vinegar for every 473 ml (16 oz.) of water.
3. Allow the mixture to stand in the container for an additional 3 full minutes. Total contact time of the vinegar solution in the container should equal 5 minutes.
4. Pour the vinegar solution out of the container over the inside surface of the 2-part lid.
5. Repeat the sanitizing procedure a second time (Steps 2 through 4).
6. Allow the container to air dry with the lid off to avoid trapping moisture. DO NOT rinse after sanitizing. If desired, rinse immediately before the next use.

WARRANTY AND SERVICE FOR EXPLORIAN E510

5-Year Full Machine Warranty

IMPORTANT RESTRICTION: VITAMIX MAY RESTRICT WARRANTY SERVICE FOR OUR PRODUCTS TO THE COUNTRY WHERE VITAMIX OR ITS AUTHORISED DISTRIBUTORS ORIGINALLY SOLD THE PRODUCT.

- Vitamix does not recommend use of our products outside of the country where such products were sold and built to be used.
- Our products are approved and certified to country-specific safety standards.
- Each country may require a different voltage and frequency, power cable, and plug for the same product.
- After-sales service may not be available outside of the country where Vitamix or any of its authorised distributors originally sold a product, as our authorised distributors and repair technicians stock repair parts that may be country-specific.

1. Product Warranty.

To verify warranty, contact the Authorised Vitamix Household Distributor/Service Provider in your country by visiting https://www.vitamix.com/vr/en_us/international-support.

2. Who Can Seek Warranty Coverage.

This Warranty is extended by Vitamix to the owner of this appliance for personal household use only. This Warranty does not apply to products used for commercial, rental, or re-sale purposes. Should the ownership of the Vitamix change during the warranty period, please provide the new owner with a copy of the original receipt to be able to verify start-date of the warranty.

3. What is Covered.

Vitamix warrants to the owner that if this appliance (an “appliance” consists of a motor base, any container(s), lids, and tamper(s) purchased together) fails within 5 years from the earlier of the date of purchase or date of delivery as permitted by law due to a defect in material or workmanship or as a result of normal wear and tear from ordinary household use. The Authorised Vitamix Household Distributor/Service Provider will, within 30 days of receipt of the returned appliance, repair the failed appliance or component part of the appliance free of charge.

If, in Vitamix’s sole discretion, the failed appliance or component part of the appliance cannot be repaired, the Authorised Vitamix Household Distributor/Service Provider will elect to replace the appliance free of charge with the same model or the next closest model if original model is no longer available to purchase. In this case, the warranty start-date remains the same as the purchase date of the original Vitamix.

4. What is Not Covered.

- This Warranty does not apply to appliances used commercially or in non-household applications.
- This Warranty is only valid if the appliance is used and maintained in accordance with the instructions, warnings, and safeguards contained in the owner’s manual. This Warranty does not cover damage caused by accidents (ex: foreign object in container while blending, dropping of unit or container, etc.).
- This Warranty does not cover damage resulting from use of the appliance outside of the country where it was sold and built to be used, and Warranty service may be restricted to the country where Vitamix or its authorized distributors originally sold the appliance.
- This Warranty does not cover cosmetic changes that do not affect performance, such as discoloration, scratches, or the effects of the use of abrasives or cleaners or food build up.

Containers: Processing certain herbs and spices in the container/cup will result in cosmetic marring of the container/cup and may cause the blades to wear prematurely. Traces of sand, coarse gritty and abrasive herbs will also cause the blades to wear prematurely. Herbs may contain volatile oils, cause the container/cup to retain the oils and cause permanent discoloration. Your container/cup and blades are not covered under the Vitamix warranty under these circumstances.

Vitamix will not be responsible for the cost of any unauthorised warranty repairs. Your Vitamix may only be serviced or repaired by an Authorized Vitamix Household Distributor/Service Provider.

REPAIR, REPLACEMENT OR REFUND OF THE PURCHASE PRICE ARE THE EXCLUSIVE REMEDIES OF PURCHASER AND THE SOLE LIABILITY OF VITAMIX AND ITS AUTHORISED DISTRIBUTORS UNDER THIS WARRANTY. NO EMPLOYEE OR REPRESENTATIVE OF VITAMIX OR ANY OF ITS AUTHORISED DISTRIBUTORS IS AUTHORISED TO MAKE ANY ADDITIONAL WARRANTY OR ANY MODIFICATION TO THIS WARRANTY WHICH MAY BE BINDING UPON VITAMIX. ACCORDINGLY, PURCHASER SHOULD NOT RELY UPON ANY ADDITIONAL STATEMENTS MADE BY ANY EMPLOYEE OR REPRESENTATIVE OF VITAMIX OR ANY OF ITS AUTHORISED DISTRIBUTORS. IN NO EVENT, WHETHER BASED ON CONTRACT, INDEMNITY, WARRANTY, TORT (INCLUDING NEGLIGENCE), STRICT LIABILITY OR OTHERWISE, SHALL VITAMIX BE LIABLE FOR ANY SPECIAL, INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES, INCLUDING, WITHOUT LIMITATION, LOSS OF PROFIT OR REVENUE.

NOTE: If your Vitamix needs to be serviced but does not fall within the Warranty guidelines, it may still be repaired at your cost (for repair and shipping). Contact the Authorised Vitamix Household Distributor/Service Provider in your country by visiting https://www.vitamix.com/vr/en_us/international-support. For Vitamix Household Support or Sales call 800.848.2649 or +1.440.235.4840 (International) or email service@vitamix.com.

5. What Voids this Warranty.

- Abuse, misuse, negligent use, alteration of the appliance, exposure to abnormal or extreme conditions, or failure to follow the operating instructions in this manual will void this Warranty.
- The Warranty is also void if repairs to the appliance or any component part of the appliance are performed by someone other than either Vitamix or an authorised Vitamix Service Provider or if any component part of a appliance subject to this Warranty is used in combination with a motor base or container that is not expressly authorised by Vitamix.
- The warranty is void when the appliance is used with a transformer or adapter to convert the voltage.
- Removal of the data label containing serial number information will void your warranty.

6. How to Obtain Warranty Service.

Contact the Authorized Vitamix Household Distributor/Service Provider in your country for assistance servicing your Vitamix. For a list of Vitamix Distributors, visit https://www.vitamix.com/vr/en_us/international-support.

WARRANTY AND SERVICE FOR EXPLORIAN E520

7-Year Full Machine Warranty

IMPORTANT RESTRICTION: VITAMIX MAY RESTRICT WARRANTY SERVICE FOR OUR PRODUCTS TO THE COUNTRY WHERE VITAMIX OR ITS AUTHORISED DISTRIBUTORS ORIGINALLY SOLD THE PRODUCT.

- Vitamix does not recommend use of our products outside of the country where such products were sold and built to be used.
- Our products are approved and certified to country-specific safety standards.
- Each country may require a different voltage and frequency, power cable, and plug for the same product.
- After-sales service may not be available outside of the country where Vitamix or any of its authorised distributors originally sold a product, as our authorised distributors and repair technicians stock repair parts that may be country-specific.

1. Product Warranty.

To verify warranty, contact the Authorised Vitamix Household Distributor/Service Provider in your country by visiting https://www.vitamix.com/vr/en_us/international-support.

2. Who Can Seek Warranty Coverage.

This Warranty is extended by Vitamix to the owner of this appliance for personal household use only. This Warranty does not apply to products used for commercial, rental, or re-sale purposes. Should the ownership of the Vitamix change during the warranty period, please provide the new owner with a copy of the original receipt to be able to verify start-date of the warranty.

3. What is Covered.

Vitamix warrants to the owner that if this appliance (an “appliance” consists of a motor base, any container(s), lids, and tamper(s) purchased together) fails within 7 years from the earlier of the date of purchase or date of delivery as permitted by law due to a defect in material or workmanship or as a result of normal wear and tear from ordinary household use. The Authorised Vitamix Household Distributor/Service Provider will, within 30 days of receipt of the returned appliance, repair the failed appliance or component part of the appliance free of charge.

If, in Vitamix’s sole discretion, the failed appliance or component part of the appliance cannot be repaired, the Authorised Vitamix Household Distributor/Service Provider will elect to replace the appliance free of charge with the same model or the next closest model if original model is no longer available to purchase. In this case, the warranty start-date remains the same as the purchase date of the original Vitamix.

4. What is Not Covered.

- This Warranty does not apply to appliances used commercially or in non-household applications.
- This Warranty is only valid if the appliance is used and maintained in accordance with the instructions, warnings, and safeguards contained in the owner’s manual. This Warranty does not cover damage caused by accidents (ex: foreign object in container while blending, dropping of unit or container, etc.).
- This Warranty does not cover damage resulting from use of the appliance outside of the country where it was sold and built to be used, and Warranty service may be restricted to the country where Vitamix or its authorized distributors originally sold the appliance.
- This Warranty does not cover cosmetic changes that do not affect performance, such as discoloration, scratches, or the effects of the use of abrasives or cleaners or food build up.

Containers: Processing certain herbs and spices in the container/cup will result in cosmetic marring of the container/cup and may cause the blades to wear prematurely. Traces of sand, coarse gritty and abrasive herbs will also cause the blades to wear prematurely. Herbs may contain volatile oils, cause the container/cup to retain the oils and cause permanent discoloration. Your container/cup and blades are not covered under the Vitamix warranty under these circumstances.

Vitamix will not be responsible for the cost of any unauthorised warranty repairs. Your Vitamix may only be serviced or repaired by an Authorized Vitamix Household Distributor/Service Provider.

REPAIR, REPLACEMENT OR REFUND OF THE PURCHASE PRICE ARE THE EXCLUSIVE REMEDIES OF PURCHASER AND THE SOLE LIABILITY OF VITAMIX AND ITS AUTHORISED DISTRIBUTORS UNDER THIS WARRANTY. NO EMPLOYEE OR REPRESENTATIVE OF VITAMIX OR ANY OF ITS AUTHORISED DISTRIBUTORS IS AUTHORISED TO MAKE ANY ADDITIONAL WARRANTY OR ANY MODIFICATION TO THIS WARRANTY WHICH MAY BE BINDING UPON VITAMIX. ACCORDINGLY, PURCHASER SHOULD NOT RELY UPON ANY ADDITIONAL STATEMENTS MADE BY ANY EMPLOYEE OR REPRESENTATIVE OF VITAMIX OR ANY OF ITS AUTHORISED DISTRIBUTORS. IN NO EVENT, WHETHER BASED ON CONTRACT, INDEMNITY, WARRANTY, TORT (INCLUDING NEGLIGENCE), STRICT LIABILITY OR OTHERWISE, SHALL VITAMIX BE LIABLE FOR ANY SPECIAL, INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES, INCLUDING, WITHOUT LIMITATION, LOSS OF PROFIT OR REVENUE.

NOTE: If your Vitamix needs to be serviced but does not fall within the Warranty guidelines, it may still be repaired at your cost (for repair and shipping). Contact the Authorised Vitamix Household Distributor/Service Provider in your country by visiting https://www.vitamix.com/vr/en_us/international-support. For Vitamix Household Support or Sales call 800.848.2649 or +1.440.235.4840 (International) or email service@vitamix.com.

5. What Voids this Warranty.

- Abuse, misuse, negligent use, alteration of the appliance, exposure to abnormal or extreme conditions, or failure to follow the operating instructions in this manual will void this Warranty.
- The Warranty is also void if repairs to the appliance or any component part of the appliance are performed by someone other than either Vitamix or an authorised Vitamix Service Provider or if any component part of a appliance subject to this Warranty is used in combination with a motor base or container that is not expressly authorised by Vitamix.
- The warranty is void when the appliance is used with a transformer or adapter to convert the voltage.
- Removal of the data label containing serial number information will void your warranty.

6. How to Obtain Warranty Service.

Contact the Authorized Vitamix Household Distributor/Service Provider in your country for assistance servicing your Vitamix. For a list of Vitamix Distributors, visit https://www.vitamix.com/vr/en_us/international-support.